 


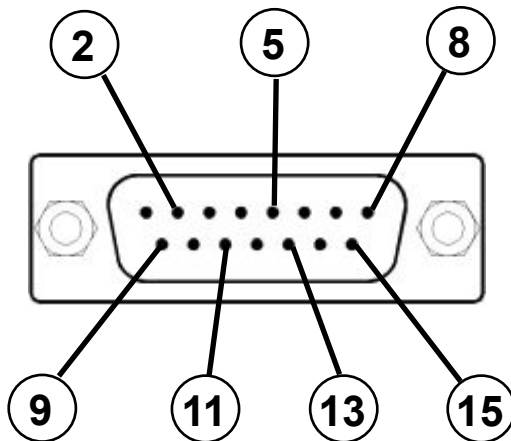

DB15 Pin-Out

Pin Number	Function
2	Signal Out
5	Supply
8	Set-Point
9	Ground
11	Secondary Out
13	RS-232 Receive
15	RS-232 Send

 


Note: The above pin-out is correct for units with a **DB15** pin-out. If your unit is marked **DB15K** or **DB15H**, you must use the correct pin-out (see pages 2 and 3).



DB15H Pin-Out

Pin Number	Function
6	Signal Out
7	Ground
11	Supply
14	Set-Point
10	Secondary Out
2	RS-232 Receive
15	RS-232 Send

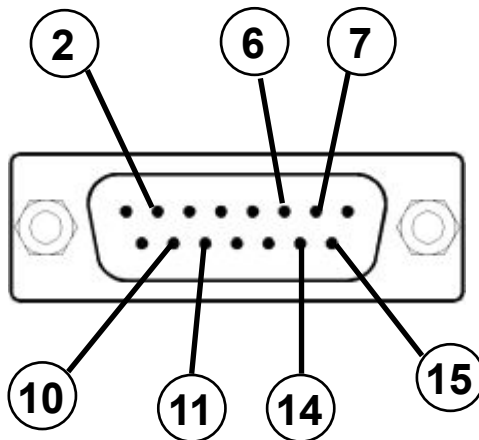 


Note: The above pin-out is correct for units with a **DB15H** pin-out. If your unit is marked **DB15** or **DB15K**, you must use the correct pin-out (see pages 1 and 3).



DB15K Pin-Out

Pin Number	Function
2	Signal Out
5	Ground
7	Supply
8	Set-Point
9	Secondary Out
13	RS-232 Receive
14	RS-232 Send

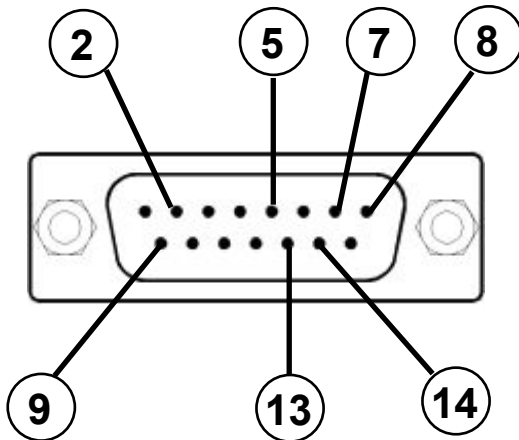

Note: The above pin-out is correct for units with a **DB15K** pin-out. If your unit is marked **DB15** or **DB15H**, you must use the correct pin-out (see pages 1 and 2).