

 
 
**IP66/67 EIP, ECAT, PROFINET,
and Modbus TCP/IP Standard Pinout**

Always identify proper wiring via continuity check & color when using multi-strand cables.
The calibration certificate for the device should be used as the definitive reference for custom wiring options.





+1 (888) 290-6060
alicat.com/pinout

**Female M12 4-Pin
(Top, ×2)**

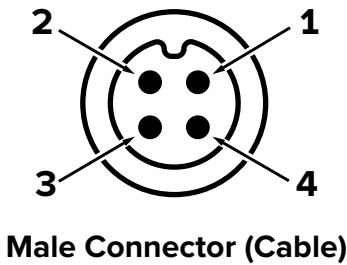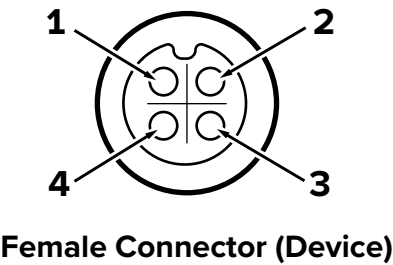

**Female M8 4-Pin
(Side)**

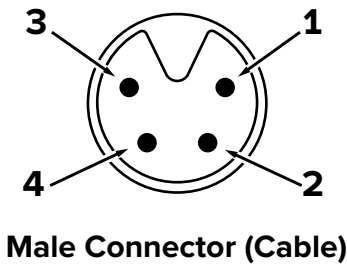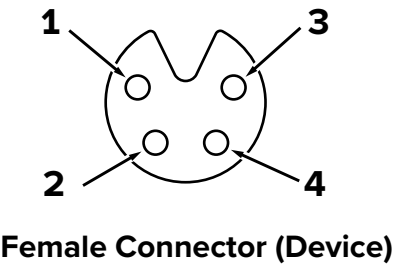  

PIN	4-PIN M12 IP66/67 TOP
1	Tx+: Send Data +
2	Rx+: Receive Data +
3	Tx-: Send Data -
4	Rx-: Receive Data -

PIN	4-PIN M8 IP66/67 SIDE
1	Tx: Sends RS-232 (TX) signals from the device.
2	Power In: Powers the device, see the specification sheet for details.
3	Ground: Common ground for power, digital communications, analog signals and alarms.
4	Rx: Receives RS-232 (RX) signals to change the device's settings.