


Pressure Controller with Remote Sensor

Quick Start Guide

Models PC3, PC3S, PC3R, PC3RS
for gauge or absolute pressure



A Halma company

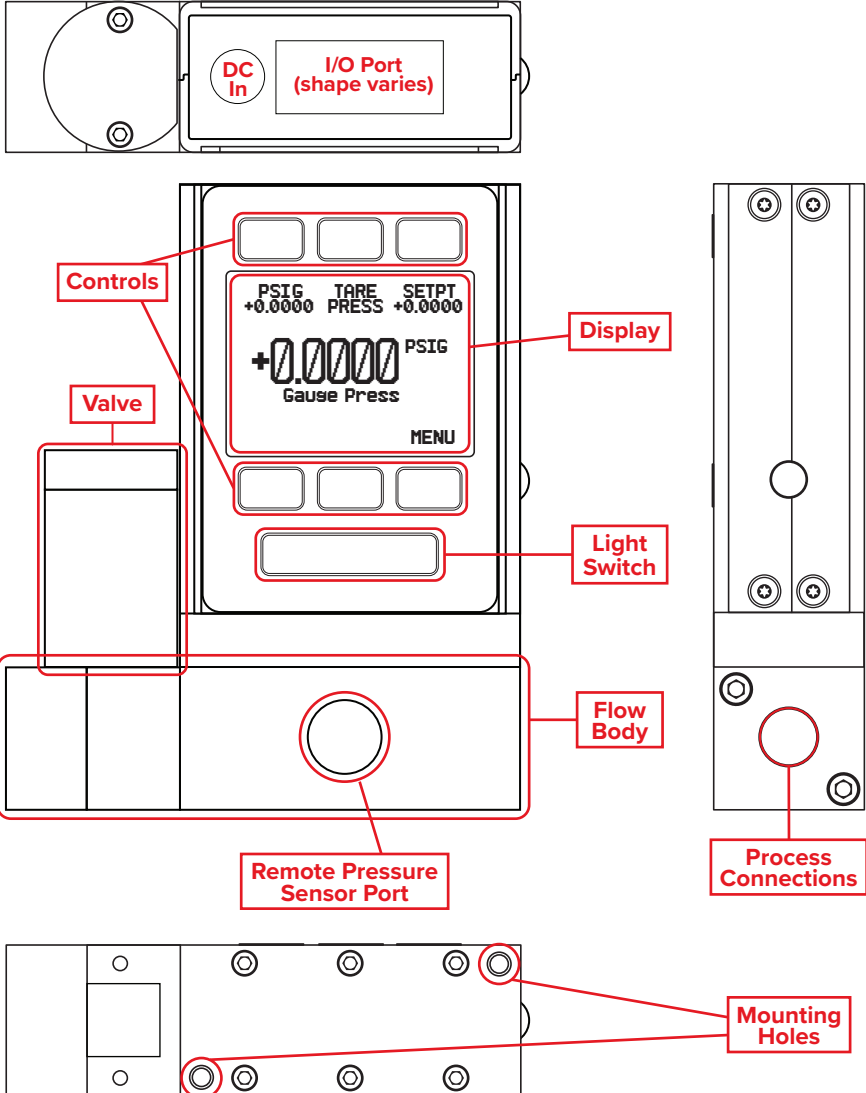

Download the full manual: Alicat.com/manuals

Annual Calibration • Troubleshooting • Questions:


+31 (0) 26 203.1651 • europe@alicat.com

This box includes:

- Alicat device
- NIST traceable calibration certificate
- Optional accessories (cables, power adapters, filters)

Get Started:

1

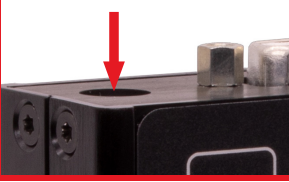

Power

The power supply input is on top. Most devices require 12–24 Vdc and 1 A. See *Power and Signal Connections* in the manual for details.


2



Tare

Before installing the device into your process, press the **TARE PRESS** button on the main screen. This will zero out (tare) your unit.*

3

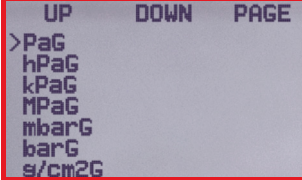


Engineering Units

Ensure the proper units are selected. Press **MENU** → **SETUP** → **SENSOR** → **ENGINEERING UNITS**.

*Tare unavailable on absolute pressure units

You're Ready to Connect:

Range	Burst Pressure
≤500 PSI	3× default full scale
>500 PSI	1.5× default full scale

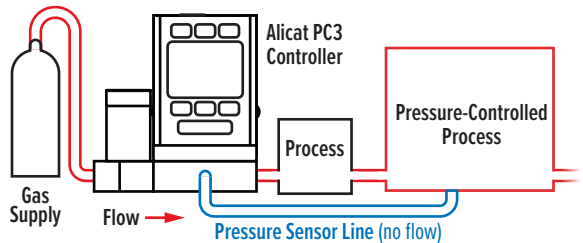

4

Ensure the flow path is the same direction as the flow arrow on your unit.

5

The port on the front is an isolated line for sensing pressure further down the line. Begin flow by setting a setpoint.

Download the full manual: [Alicat.com/manuals](https://alicat.com/manuals)

Annual Calibration • Troubleshooting • Questions:
+31 (0) 26 203.1651 • europe@alicat.com



DOC-MANUAL-PC3-QUICK-EU
Rev 1 • 2021-06-03

