




A **Halma** company

Thank you for your purchase!

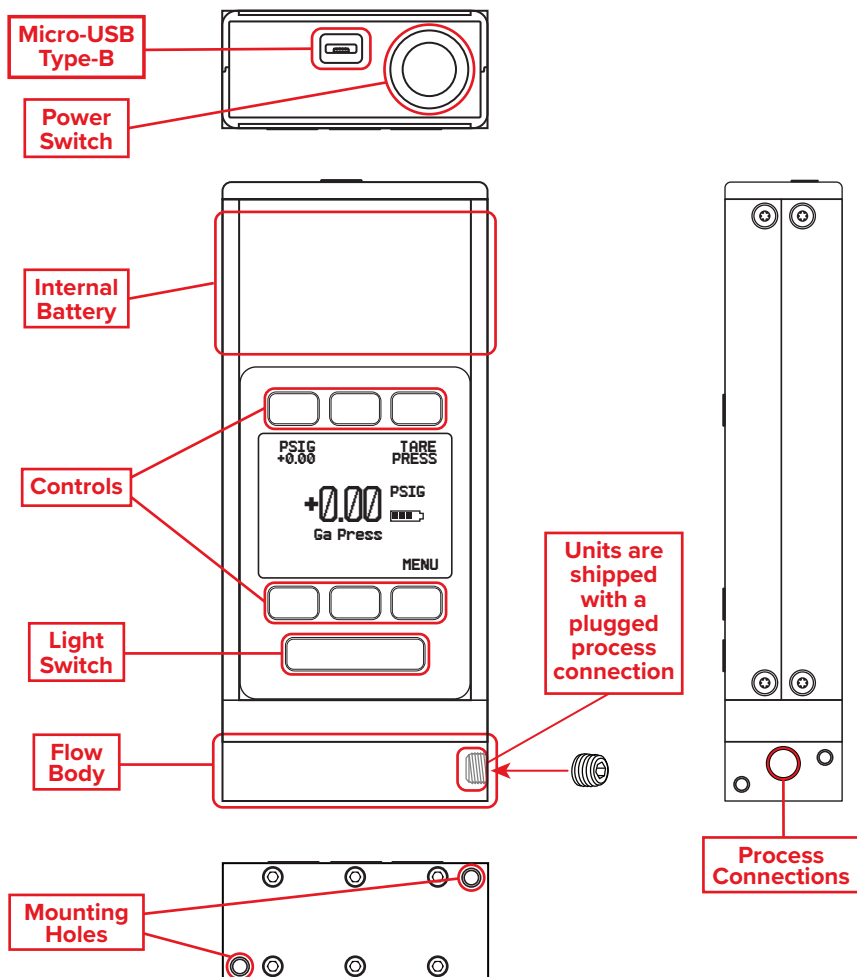

Download the full manual: [Alicat.com/manuals](https://www.alicat.com/manuals)

Annual Calibration • Troubleshooting • Questions
520-290-6060 • info@alicat.com • Live web chat at [Alicat.com](https://www.alicat.com)

This box includes:

- Alicat device
- NIST traceable calibration certificate
- Optional accessories (cables, power adapters, filters)



Get Started:



Power

The battery is shipped without a charge. Once fully charged, it lasts up to 18 hours. Use the supplied power cable with an outlet adapter for fastest charging.



Tare


Before installing the device into your process, press the **TARE PRESS** button on the main screen. This will zero out (tare) your unit.*



Engineering Units

Ensure the proper units are selected. Press the top-left button, then **SET DEVICE ENG UNITS**.

** Tare not available on absolute pressure units*

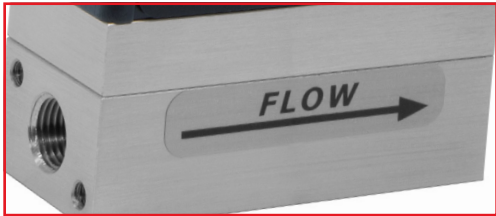

Range	Burst Pressure
≤500 PSI	3× default full scale
>500 PSI	1.5× default full scale

You're Ready to Connect:

4

For dead-ended pressure control, connect the device to your process using the left port. For in-line pressure measurement, remove the plug prior to connecting to your process.

Download the full manual: [Alicat.com/manuals](https://alicat.com/manuals)
Annual Calibration • Troubleshooting • Questions
Consult your **Alicat manual** or contact us at **520-290-6060** or **info@alicat.com**

