

Technical Data for IS-Max ISM-Series Mass Flow Meters

0.5 sccm full scale through 5000 SLPM full scale

Standard specifications. Consult Alicat for high-pressure, media-isolated (caustic gas resistant), and low pressure drop versions.



+1 (888) 290-6060
alicat.com/ism

Ex Document

CERTIFICATIONS	MARKING	CERTIFICATE
ATEX	II 1G Ex ia IIC T4 Ga T_{amb} -20 °C to +70 °C	DEKRA 22ATEX0075X
IECEX	Ex ia IIC T4 Ga T_{amb} -20 °C to +70 °C	IECEX DEK 22.0078X

SENSOR PERFORMANCE ¹			
RANGE	0.5 – 5 SCCM	10 SCCM – 30 SLPM	50 – 5000 SLPM
Mass flow accuracy ^{2,3}	Standard accuracy: $\pm 0.8\%$ of reading and $\pm 0.2\%$ of full scale High accuracy: $\pm 0.4\%$ of reading and $\pm 0.2\%$ of full scale	Standard accuracy: $\pm 0.6\%$ of reading or $\pm 0.1\%$ of full scale, whichever is greater High accuracy: $\pm 0.5\%$ of reading or $\pm 0.1\%$ of full scale, whichever is greater	Standard accuracy: $\pm 0.8\%$ of reading and $\pm 0.2\%$ of full scale High accuracy: $\pm 0.4\%$ of reading and $\pm 0.2\%$ of full scale
Flow repeatability (2 σ)	$\pm 0.2\%$ of reading and $\pm 0.02\%$ of full scale	$\pm 0.1\%$ of reading and $\pm 0.02\%$ of full scale	$\pm 0.2\%$ of reading and $\pm 0.02\%$ of full scale
Pressure accuracy ²	Above 1 atm: $\pm 0.5\%$ of reading Below 1 atm: ± 0.07 PSIA		
Flow measurement range	0.01 – 100% of full scale (10,000:1 turndown ratio)		
Operating pressure	11.5 – 160 PSIA		
Pressure sensitivity	Mass flow zero and span shift: $\pm 0.08\%$ of reading $\pm 0.02\%$ of full scale per atm from calibration conditions	Mass flow zero shift: $\pm 0.01\%$ of full scale per atm from tare pressure Mass flow span shift: $\pm 0.1\%$ of reading per atm from calibration conditions	Mass flow zero and span shift: $\pm 0.08\%$ of reading $\pm 0.02\%$ of full scale per atm calibration conditions
Temperature sensitivity	Mass flow zero and span shift: $\pm 0.02\%$ of full scale per °C from 25 °C	Mass flow zero shift: $\pm 0.01\%$ of full scale per °C from tare temperature Mass flow span shift: $\pm 0.01\%$ of reading per °C from 25 °C	Mass flow zero and span shift: $\pm 0.02\%$ of full scale per °C from 25 °C
Temperature accuracy	± 0.75 °C		
Relative humidity accuracy ⁴	$\pm 1.8\%$ RH at +23 °C (0% RH to 90% RH)		
Relative humidity temperature sensitivity ⁴	0.05% RH/°C (0 °C to +60 °C)		
Operating temperature range	-20 – 70 °C (ambient and gas)		
Totalizer volume uncertainty	$\pm 0.1\%$ of reading in additional uncertainty		
Sensor response time	<1 ms		
Typical indication response time	<10 ms, flow rate dependent		
Typical warm-up time	<1 s		

¹ Flow rate and pressure drop vary depending on process gas.

² Stated accuracy is after tare (for mass flow), under equilibrium conditions, includes repeatability and linearity.

³ High accuracy mass flow readings only available on devices with a full scale range over 5 SCCM and under 500 SLPM.

⁴ Relative humidity sensor is an optional feature.

Ex Document

Technical Data for IS-Max ISM-Series Mass Flow Meters

0.5 sccm full scale through 5000 SLPM full scale

Standard specifications. Consult Alicat for high-pressure, media-isolated (caustic gas resistant), and low pressure drop versions.



+1 (888) 290-6060
alicat.com/ism

Ex Document

MECHANICAL	
Wetted materials	303 and 316L stainless steel; FKM alumina ceramic, glass, gold, heat-cured epoxy, heat-cured silicone rubber, polyamide, silicon
Maximum pressure	Damage possible above 200 PSIA common mode pressure. Damage possible by rapid pressure change above 75 PSI differential pressure.
Relative humidity range	0 – 95%, non-condensing
Ingress protection	IP66 rating Dust-tight and protected against strong jets of water
Mounting orientation sensitivity	None
Mounting holes	4x 6-32 UNC threaded ∇ 0.276" [7.01 mm]
Default process connections ⁵	0.5 – 50 sccm: M5 x 0.8mm female 100 sccm – 30 SLPM: 1/8" NPT female 50 – 100 SLPM: 1/4" NPT female 250 SLPM: 1/2" NPT female 1000 – 2000 SLPM: 3/4" NPT female 3000 SLPM: 1 1/4" NPT female 5000 SLPM: 1 1/2" NPT female

⁵ Consult Alicat for available connection options, such as: compression, face seal, push-to-connect, BSPP, SAE, or Swagelok®-compatible (VCO® and VCR®).

POWER AND COMMUNICATIONS	
Digital output options	RS-232 Serial and Modbus RTU RS-485 Serial and Modbus RTU
Digital data update rate	40 Hz at 19200 baud
Analog output options	4 – 20 mA
Analog data update rate	1 kHz
Analog signal accuracy	\pm 0.1% of full scale additional uncertainty
Interactive display	Monochrome LCD with integrated touchpad and backlight; simultaneously displays mass flow, volumetric flow, temperature, gauge pressure, and absolute pressure
Display update rate	10 Hz
Electrical connection options	DB-15
Power requirements	See DOC-IS-CONTROLDWG

FEATURES	
STP reference conditions	25 °C and 1 atm (default), user-configurable
NTP reference conditions	0 °C and 1 atm (default), user-configurable
Gas Select™	98 user-selectable gases stored internally. Each gas optimized to match NIST's REFPROP 10 gas property calculations across the operating temperature and pressure ranges for highest accuracy.
COMPOSER™	20 user-definable gas mixes. Each mix may have up to 5 gases with 0.01% composition resolution.
Multivariate process measurements	Volumetric flow, mass flow, absolute pressure, gauge pressure, barometric pressure, temperature, totalizer Optional: relative humidity
Totalizer	Measure the total accumulated mass of a particular gas (or gas mixture) that has flowed in a process.

Ex Document

Ex Document. Any revisions must be submitted for review and approval by an Ex Appointee.

Technical Data for IS-Max ISM-Series Mass Flow Meters


0.5 sccm full scale through 5000 SLPM full scale

Standard specifications. Consult Alicat for high-pressure, media-isolated (caustic gas resistant), and low pressure drop versions.


Ex Document




+1 (888) 290-6060
alicat.com/ism

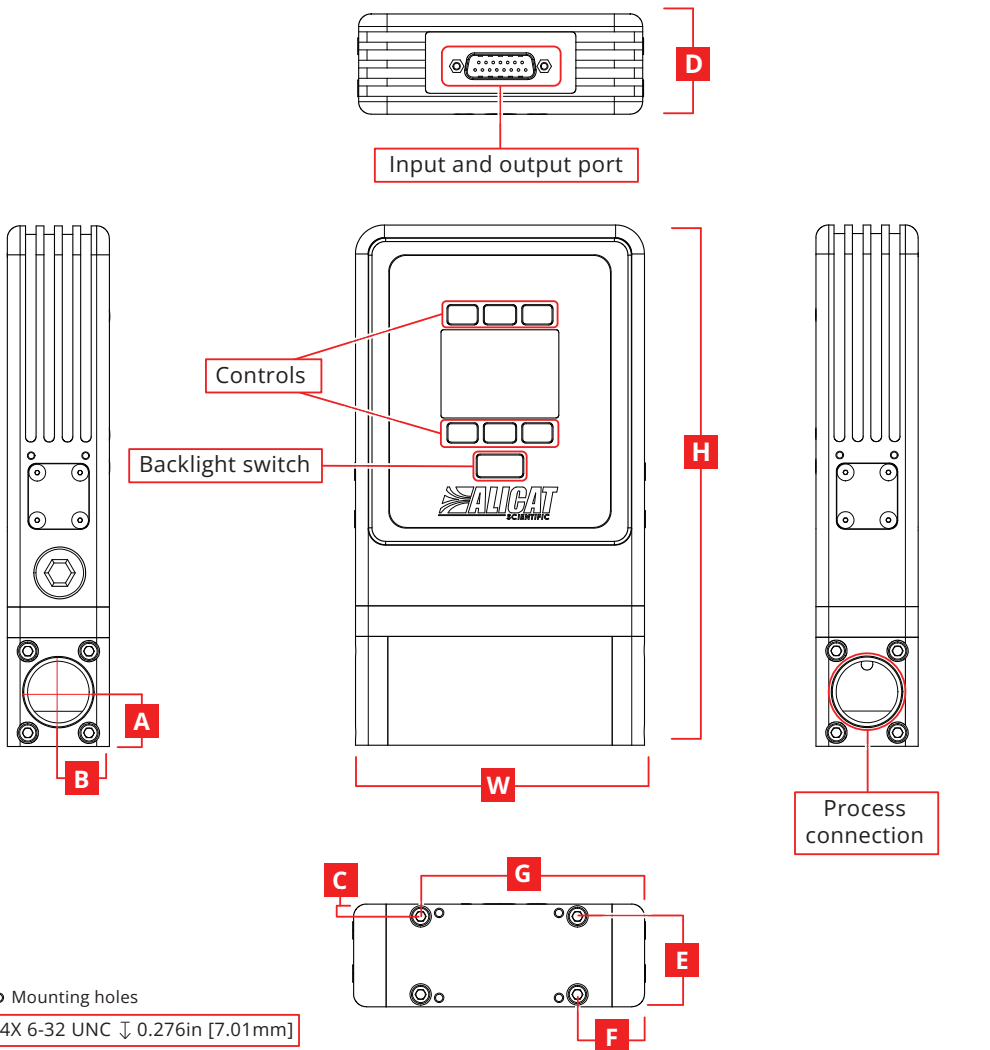

Representative Examples

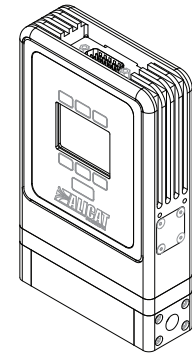

10 SLPM

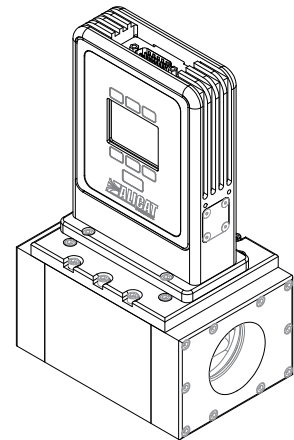

5000 SLPM

Full scale flow	DIMENSIONS									WEIGHT
	Width	Depth	Height	A	B	C	E	F	G	
0.5 SCCM – 30 SLPM	4.25"	1.50"	7.05"	0.50"	0.75"	0.13"	1.35"	1.25"	3.00"	≈ 5.0 lb
	108.0 mm	38.1 mm	179.1 mm	12.7 mm	19.1 mm	3.3 mm	34.2 mm	31.8 mm	76.2 mm	≈ 2.3 kg
50 – 1000 SLPM	4.25"	1.50"	7.65"	0.80"	0.75"	0.13"	1.35"	1.25"	3.00"	≈ 6.0 lb
	108.0 mm	38.1 mm	194.3 mm	20.3 mm	19.1 mm	3.3 mm	34.2 mm	31.8 mm	76.2 mm	≈ 2.7 kg
2000 – 3000 SLPM	5.20"	2.90"	8.21"	1.12"	1.45"	0.20"	2.70"	1.35"	3.85"	≈ 9.2 lb
	132.1 mm	73.7 mm	208.4 mm	28.4 mm	36.8 mm	5.1 mm	68.6 mm	34.3 mm	97.8 mm	≈ 4.2 kg
5000 SLPM	5.60"	3.84"	9.18"	1.45"	1.92"	0.30"	3.55"	1.55"	4.05"	≈ 16.2 lb
	142.2 mm	97.5 mm	233.0 mm	36.8 mm	48.8 mm	7.5 mm	90.0 mm	39.4 mm	102.9 mm	≈ 7.3 kg

Ex Document

Ex Document. Any revisions must be submitted for review and approval by an Ex Appointee.